

DITCH LIGHT MOUNTS

2025 TOYOTA 4RUNNER

LBTf3-01



TOOLS REQUIRED

- 12mm socket
- Flush cuts

SKILL LEVEL

- Novice
- 1 (you) person

Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1 Hours

Time to install this should only take about one hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.




STEP 1 | (Driver side installation shown) Open the hood and locate the (4) hex bolts that secure the hood to the hinges. (2 bolts per side)



STEP 2 | Using a 12mm socket, loosen (2) of the hood hinge bolts about 40% loose.

NOTE: Only loosen one side of the hood at a time.

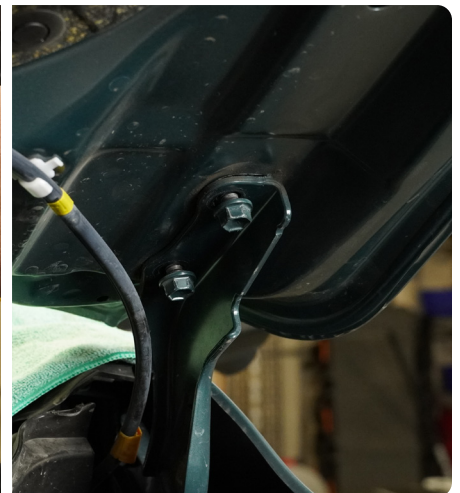

INSTALLATION **MANUAL**

STEP 3 | Install the bracket around the back side of the hood.

Note: Place a towel or rag onto the windshield to protect the windshield from any damage.




STEP 4 | Slide the brackets notched mounting points between the hood hinge and bolt head as shown.



STEP 5 | Adjust the light bracket toward the front of the vehicle while ensuring the bracket does not hit the top of the hood or fender.



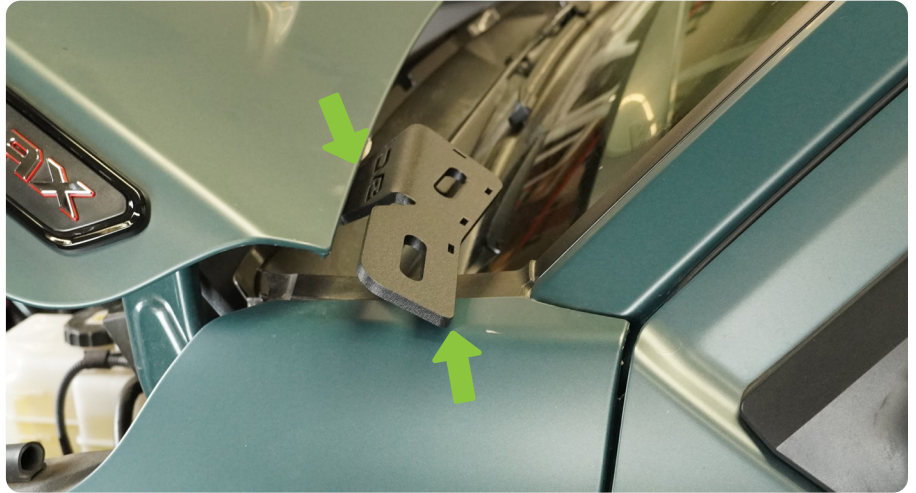

STEP 6 | Secure the hood hinge bolts hand tight.

Complete installation of the passenger side light bracket.



STEP 7 | Slowly and carefully close the hood and check the hood to fender gaps.

If the gaps are uneven, loosen the hood hinge bolts slightly and adjust the hood as needed left to right to correct the hinge to hinge gaps.



INSTALLATION MANUAL

STEP 8 | With the hood gaps corrected torque the hood hinge bolts to 10 ft lbs using a 12mm socket.



STEP 9 | Mount your chosen pod lights/accessories using the hardware provided with the light/accessories.

Use the zip tie slots to secure any loose wiring.

For this install we chose the DV8 Elite Pod lights. Part # BE3EW40W & BE3EW40W-A



INSTALLATION MANUAL

STEP 10 | When opening the hood to complete services we recommend using the lower hood prop notch to prevent the brackets/lights from causing damage to the windshield or fender.



STEP 11 | Double check that all hardware is torqued to 10 ft lbs.

Congratulations, installation of the DV8 Ditch Light Mounts is now complete.

