

XTRACT HITCH SKID

UNIVERSAL

UNHS-01



TOOLS REQUIRED

- #4 Allen head (for replacement pads)
- 5/8" hitch pin (not included)

SKILL LEVEL

- Novice
- 1 persons

Little skill level required, you can easily install it by yourself.

TIME REQUIRED

- .5 Hours

Time to install this should only take about half an hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL


Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

(4) M6X20 Countersunk Allen Head (replacement pads)



STEP 1 | Using a #4 allen tool. Double check that all four countersunk skid pad bolts are secure. These bolts should be hand tight.

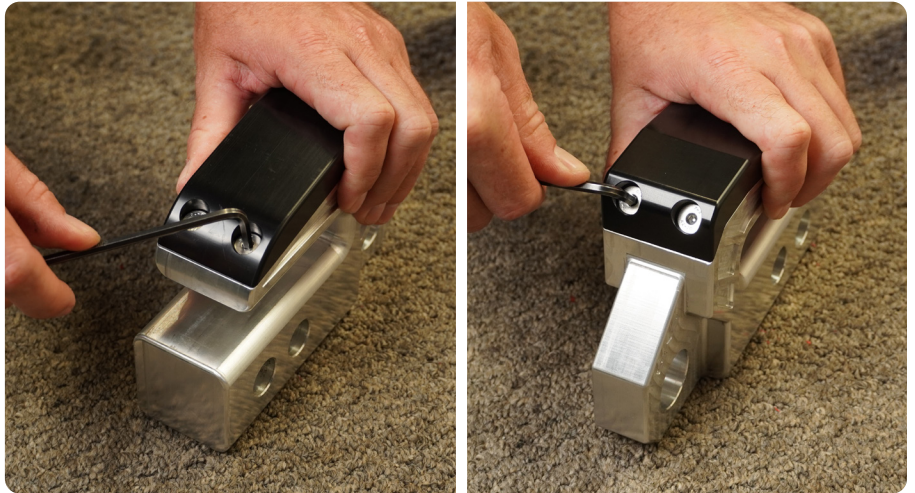

STEP 2 | Using your chosen 5/8" hitch pin, install the hitch skid into your tow hitch receiver.

Note: If planning to leave the hitch skid installed for long periods of time, we recommend using a locking hitch pin.



INSTALLATION MANUAL



STEP 3 | DV8 offers replaceable skid pads (Aluminum or Delrin) Part# UNHS-APAD/ UNHS-DPAD.

To replace the skid pad first clear material that had folded over the counter sunk allen head bolts.



INSTALLATION MANUAL



STEP 4 | Using a #4 allen tool, remove the (4) M6 counter sunk allen head bolts and remove the damage skid pad.




STEP 5 | Use a rag and vehicle detailer to clean off the surface area the new skid pad will mount to.



INSTALLATION MANUAL

STEP 6 | Place the new skid pad onto the hitch.

Using the new M6 counter sunk bolts provided in UNHS-APAD/ UNHS-DPAD and a #4 allen tool, loosely secure all four bolts first.

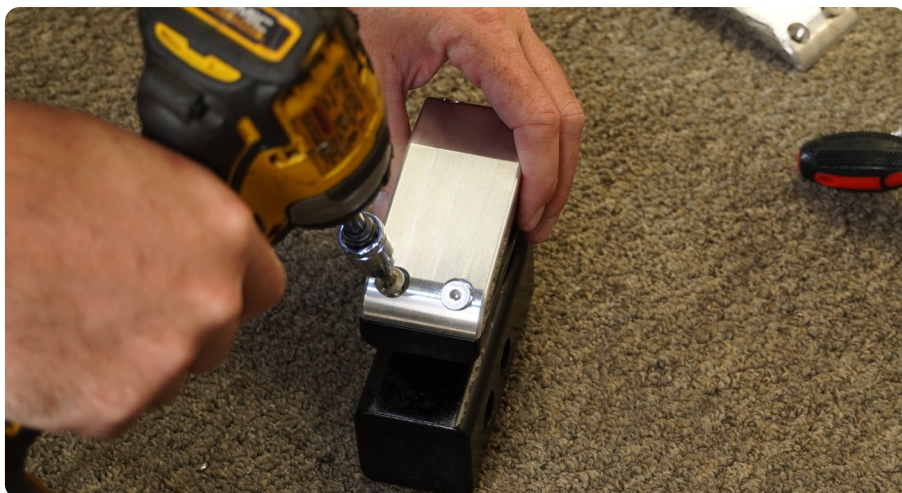

INSTALLATION MANUAL



INSTALLATION MANUAL

STEP 7 | Congratulations, installation of the Xtract Hitch Skid is now complete.

